Both LED lights are flashing when power on





POSSIBLE CAUSE: The Trigger is permanently depressed.

SOLUTION: Turn the Micro Switch Activation Screw anti clockwise direction to increase the amount of trigger travel.

SOLUTION: Do not pull the trigger when power on the marker.