Leaking from ASA





POSSIBLE CAUSE: O-Ring on the air tank is damaged.

SOLUTION: Replace the O-Ring on the Air Tank.



Thread Seal Tape

POSSIBLE CAUSE: Braided Hose (P071) is loose from Bottom ASA (A021)

SOLUTION: Apply Loctite and reconnect Braided Hose to Bottom ASA.

Leave 24 hrs for successful drying